HUINA

FIRE & RESCUE LADDER TRUCK


English instructions • SKU 1361



01 INSTALL THE BATTERIES


Vehicle — 7.4 V rechargeable battery pack (included)

1. Switch off the vehicle.
2. Unscrew and remove the battery cover.
3. Connect the battery pack to the vehicle power connector.
4. Place the pack in the compartment. Refit the cover and tighten the screw.

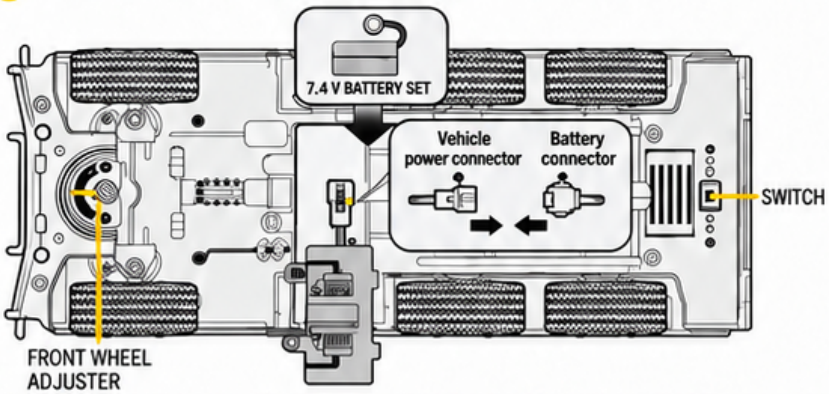


Remote control — 2 × 1.5 V AA alkaline batteries (not included)

1. Open the battery cover.
2. Insert the batteries with the + and − ends as marked.
3. Refit the cover and tighten the screw.

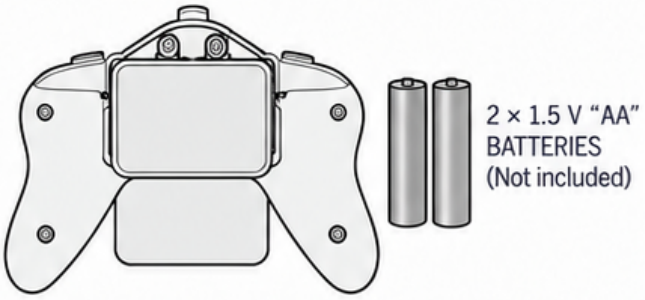

02 CHARGE THE VEHICLE BATTERY

1. Switch off the vehicle and remove the battery pack.
2. Connect the pack to the supplied USB charging lead.
3. Connect the USB lead to a suitable 5 V, 2 A USB power adaptor.
4. Allow approximately 2–3 hours to charge.
5. Disconnect the charger when charging is complete.

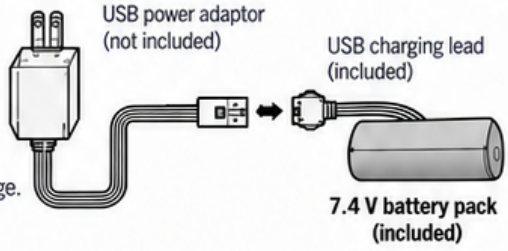

USB PARAMETERS

USB input: 5 V, 2 A
Charger output: 7.4 V

Charging indicator:

Light off: not charging | Light on: charging | Light off after charging: fully charged

Charge under adult supervision.

03 PAIR THE REMOTE CONTROL

This model uses a **2.4 GHz** radio connection.

1. Switch on the vehicle.
2. Switch on the remote control.
3. Wait for the remote indicator to stop flashing.

When the indicator stops flashing, pairing is complete.

04 REMOTE-CONTROL FUNCTIONS

CONTROL	FUNCTION
Left joystick up/down	Move forwards/backwards
Right joystick left/right	Turn left/right
Button above left joystick	Rotate ladder base left
Button below left joystick	Rotate ladder base right
Button above right joystick	Raise ladder
Button below right joystick	Lower ladder
Upper-left round face button	Lights on/off
Upper-right round face button	Sound on/off
Lower-left round face button	Water spray on
Lower-right round face button	Additional function *
Centre triangle button	Automatic demonstration
Bottom slide switch	Power on/off
Centre indicator	Indicator light

* The original labels this button "Printing / OFF". Its function needs confirmation.

05 BATTERY CARE AND SAFETY

- Insert batteries with the correct polarity.
- Do not mix battery types or old and new batteries.
- Use only the recommended battery types.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the vehicle or remote.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- Charge rechargeable batteries under adult supervision.
- Regularly check the charging lead, plug and casing for damage.
- Stop using damaged equipment until repaired.
- Keep fingers clear of sharp or moving parts.

⚠ WARNING: CHOKING HAZARD — Small parts. Not suitable for children under 3 years.

Keep these instructions for future reference. • Made in China