AI MINI THERMAL PRINTER

1 KNOW YOUR PRINTER



- AI button
- Microphone
- Charging port
- Charging indicator
- Speaker
- Paper-door clips

Front: display, left arrow, Power/Confirm and right arrow.

Find the AI button on top. Locate the microphone, charging port, indicator, speaker and paper-door clips on your printer.

2 LOAD THE PAPER

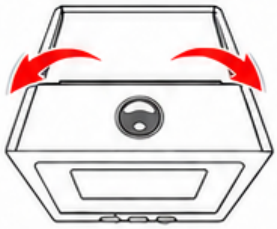

Figure 1

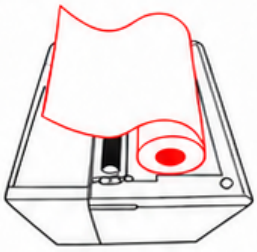

Figure 2

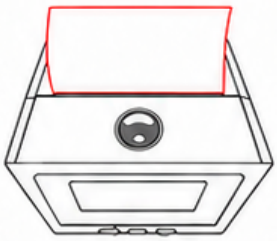

Figure 3

1. Switch the printer off.
2. Release the clips on both sides and open the paper door.
3. Insert thermal paper in the direction shown in the diagram. Leave the paper end extending through the outlet.
4. Close the door securely. Incorrect paper orientation can prevent printing.

3 SWITCH ON



Press and hold Power to switch on.

4 CONNECT TO WI-FI — DIRECT METHOD

1. Double-press the top AI button to print network setup instructions.
2. Hold the right arrow to enter Wi-Fi configuration mode.
3. On your phone, connect to the printer network named **AI_printer_XXXX**.
4. Follow the setup page that opens in your phone browser to connect the printer to your local Wi-Fi.
5. Wait for the connected Wi-Fi symbol on the printer.

To change networks, hold the right arrow, double-press AI to print the instructions and repeat setup. Hold the right arrow again to return to normal operation.

5 ALTERNATIVE — COMPANION APP

1. Hold the left arrow to display the app download QR code.
2. Scan the QR code and install the companion app.
3. Open the app and select AI Printer With Screen.
4. Enable Bluetooth on your phone and use the app to find and connect to the printer.
5. Enter your Wi-Fi network name and password in the app. Wait for confirmation.

Use the app's remote printing tools and language settings after connecting.

Continue to page 2 for printing, charging and safety.

AI MINI THERMAL PRINTER

D5 | Printing & care | Page 2 of 2



CHOOSE A MODE

Use the left and right arrows to choose:

- Simple Drawing
- Line Art
- Sketch
- Anime
- Cartoon
- Ink Wash
- Paper Cut
- Sticky Note
- Chat

CREATE & PRINT AN AI IMAGE

1. Select an image mode.
2. Press and hold the top AI button.
3. After the prompt tone, say what you want to print, for example, “Draw a cat.”
4. Release the AI button when you finish speaking.
5. Wait while the printer processes your request and prints the image.

! If no voice is detected, a prompt appears. Press any key to dismiss it and return to the selected mode.

CHAT

Select Chat. Press and hold the AI button. After the tone, speak to the chatbot.

REMOTE PRINTING & LANGUAGE

Once connected through the companion app, use its remote printing functions. The printer language can also be changed in the app.

CHARGING

- Use the matching charging cable with a suitable 5 V / 1 A USB power supply.
- Do not use the printer while charging.
- The charging indicator stays red while charging and turns off when charging is complete.
- During long-term storage, recharge approximately once every three months.

CLEANING & CARE

- Disconnect the charging cable before cleaning. Wipe the case with a dry cloth.
- Do not immerse in water or use in humid environments. Keep the case and charging connections dry.
- Regularly inspect cables, plugs, housings and other parts. Stop using damaged components until repaired.

SAFETY

- Contains small parts. Not suitable for children under 3 years.
- Children must use the printer with adult supervision.
- An adult must supervise charging.
- Keep away from fire and excessive heat.
- The built-in battery is not removable or replaceable by the user. Contact the retailer or customer service if damaged.

Keep both pages of these instructions for future reference.